


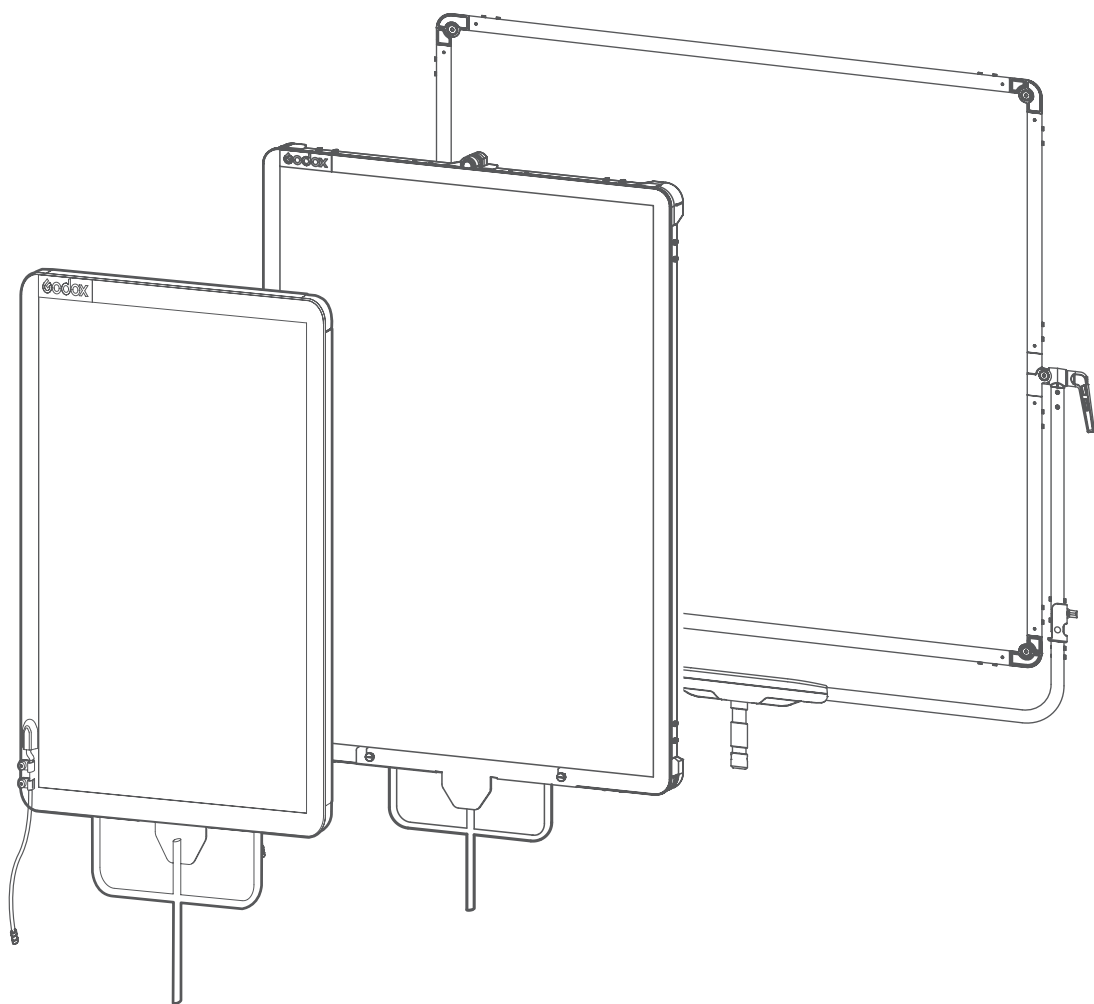

AD21 AD32 AD33

DMX模式表

DMX Mode Specification

DMX控制优先关系：DMX > CRMX > 蓝牙

01：Level 8 Bit模式

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit	
8Bit	Level		起始值	结束值	起始值	结束值
1		雾度	0	255	0%	100%

增强通道：用户打开该功能后 DMX 模式将新增扩展功能通道,具体新增如下表.打开增强通道将占用更多通道,默认该设置为关闭状态。

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit
2	Level	档位	0	9	默认档
			10	19	1档
			20	29	2档
			30	39	3档
			40	49	4档
			50	59	5档
			60	255	保留以备将来使用

02：Light Reduction 8 Bit模式

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit	
8Bit	Light Reduction	减光值	起始值	结束值	起始值	结束值
1			0	9	-0.1	
			10	19	-0.2	
			20	29	-0.3	
			30	39	-0.4	
			40	49	-0.5	
			50	59	-0.6	
			60	69	-0.7	
			70	79	-0.8	
			80	89	-0.9	
			90	99	-1	
			100	109	-1.1	
			110	119	-1.2	
			120	129	-1.3	
			130	139	-1.4	
			140	149	-1.5	
			150	159	-1.6	
			160	169	-1.7	
			170	179	-1.8	
			180	189	-1.9	
			190	199	-2	
200			255	保留以备将来使用		

增强通道：用户打开该功能后 DMX 模式将新增扩展功能通道,具体新增如下表.打开增强通道将占用更多通道,默认该设置为关闭状态。

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit	
2	Light Reduction	档位	起始值	结束值	起始值	结束值
			0	9	默认档	
			10	19	1档	
			20	29	2档	
			30	39	3档	
			40	49	4档	
			50	59	5档	
			60	255	保留以备将来使用	

03：Ultimate 8 Bit模式

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit	
8Bit	Ultimate		起始值	结束值	起始值	结束值
1		模式	0	9	雾度	
			10	19	减光值	
			20	255	保留以备将来使用	
2		雾度	0	255	0%	100%
2		减光值	0	9	-0.1	
			10	19	-0.2	
			20	29	-0.3	
			30	39	-0.4	
			40	49	-0.5	
			50	59	-0.6	
			60	69	-0.7	
			70	79	-0.8	
			80	89	-0.9	
			90	99	-1	
			100	109	-1.1	
			110	119	-1.2	
			120	129	-1.3	
			130	139	-1.4	
			140	149	-1.5	
			150	159	-1.6	
			160	169	-1.7	
			170	179	-1.8	
			180	189	-1.9	
			190	199	-2	
		200	255	保留以备将来使用		

增强通道：用户打开该功能后 DMX 模式将新增扩展功能通道,具体新增如下表。打开增强通道将占用更多通道,默认该设置为关闭状态。

DMX 通道	功能	参数名	DMX值 8Bit		实际参数值 8Bit	
3	Ultimate	档位	起始值	结束值	起始值	结束值
			0	9	默认档	
			10	19	1档	
			20	29	2档	
			30	39	3档	
			40	49	4档	
			50	59	5档	
			60	255	保留以备将来使用	

DMX Control Priority: DMX>CRMX>Bluetooth

01: Level 8 Bit Mode

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
8Bit	Level		Starting	Ending	Starting	Ending
1		Luminousness	0	255	0%	100%

Extend DMX Channels: The DMX mode will add extended channels when this function is turned on, as shown in the following table. Turning on the extend DMX channels will take up more channels, and this setting is off by default.

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
2	Level	Level	0	9	Default	
			10	19	1st	
			20	29	2nd	
			30	39	3rd	
			40	49	4th	
			50	59	5th	
			60	255	Save for future use	

02: Light Reduction 8 Bit Mode

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
8Bit	Light Reduction	Light Reduction	Starting	Ending	Starting	Ending
1			0	9	-0.1	
			10	19	-0.2	
			20	29	-0.3	
			30	39	-0.4	
			40	49	-0.5	
			50	59	-0.6	
			60	69	-0.7	
			70	79	-0.8	
			80	89	-0.9	
			90	99	-1	
			100	109	-1.1	
			110	119	-1.2	
			120	129	-1.3	
			130	139	-1.4	
			140	149	-1.5	
			150	159	-1.6	
			160	169	-1.7	
			170	179	-1.8	
			180	189	-1.9	
			190	199	-2	
200			255	Save for future use		

Extend DMX Channels: The DMX mode will add extended channels when this function is turned on, as shown in the following table. Turning on the extend DMX channels will take up more channels, and this setting is off by default.

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
2	Light Reduction	Level	Starting	Ending	Starting	Ending
			0	9	Default	
			10	19	1st	
			20	29	2nd	
			30	39	3rd	
			40	49	4th	
			50	59	5th	
			60	255	Save for future use	

03: Ultimate 8 Bit Mode

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
8Bit	Ultimate		Starting	Ending	Starting	Ending
1		Mode	0	9	Luminousness	
2			10	19	Light Reduction	
			20	255	Save for future use	
		Luminousness	0	255	0%	100%
2		Light Reduction	0	9	-0.1	
			10	19	-0.2	
			20	29	-0.3	
			30	39	-0.4	
			40	49	-0.5	
			50	59	-0.6	
			60	69	-0.7	
			70	79	-0.8	
			80	89	-0.9	
			90	99	-1	
			100	109	-1.1	
			110	119	-1.2	
			120	129	-1.3	
			130	139	-1.4	
			140	149	-1.5	
			150	159	-1.6	
			160	169	-1.7	
			170	179	-1.8	
			180	189	-1.9	
			190	199	-2	
			200	255	Save for future use	

Extend DMX Channels: The DMX mode will add extended channels when this function is turned on, as shown in the following table. Turning on the extend DMX channels will take up more channels, and this setting is off by default.

DMX channel	Function	Parameter	DMX value 8Bit		Actual value 8Bit	
3	Ultimate	Level	Starting	Ending	Starting	Ending
			0	9	Default	
			10	19	1st	
			20	29	2nd	
			30	39	3rd	
			40	49	4th	
			50	59	5th	
			60	255	Save for future use	

深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业区厂房 2 栋

电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China

Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com Made in China